
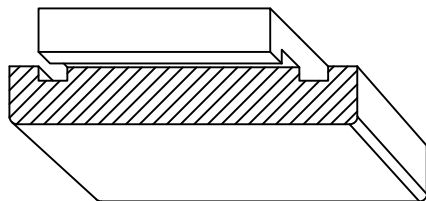
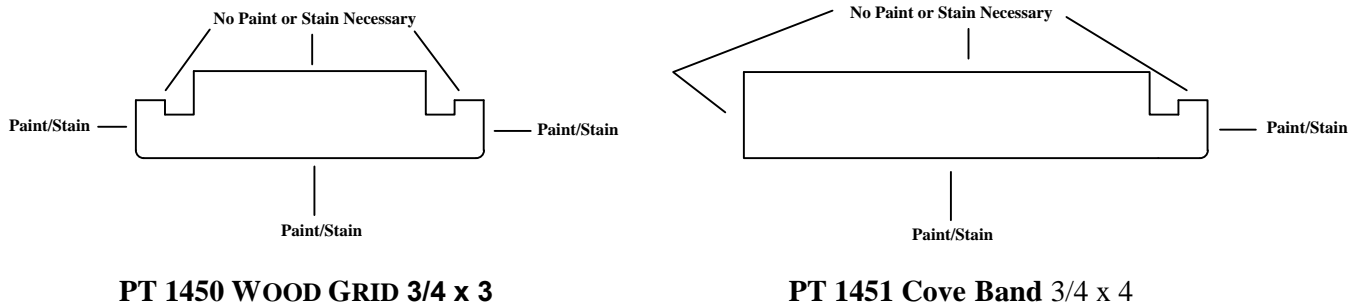


THE WOOD GRID® SUSPENDED COFFERED CEILING SYSTEM PAINT/STAIN GUIDE

Diagram 3

- *Staining or top coating should be done prior to installation.
- *Touch up if necessary.
- *Priming should be done prior to installation.
- *Painting of grid can be done before or after installation.
- *Coffers should be painted before installation.

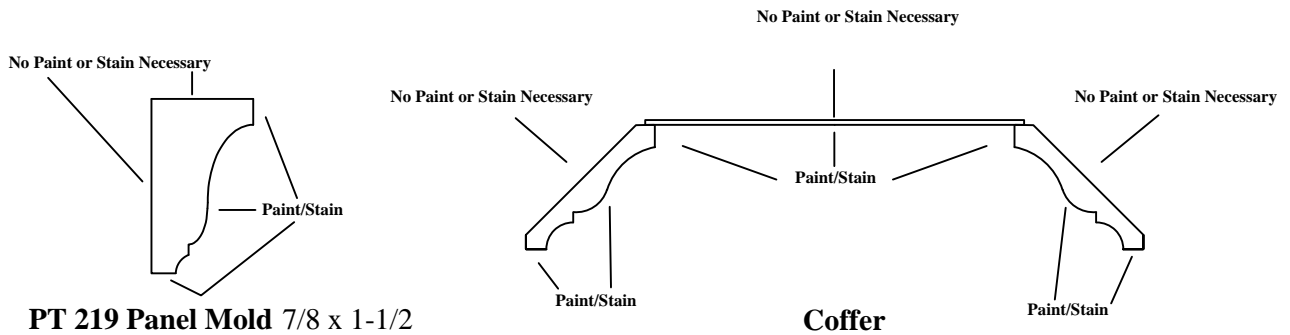

Stain or prime the key-lock ends (shaded area) of the cross tees as shown in order to prevent raw wood from showing. Do not top coat. Wipe away any drips or runs as these can prevent the key-lock joint from fitting into the grid.

MIDWESTERN WOOD PRODUCTS COMPANY
1500 West Jefferson, P.O. Box 434
Morton, Illinois 61550
Phone 309/266-9771
FAX 309/263-2696

*In areas with high humidity, sealing the back side of all components is recommended.